 


Operating instructions

EN DP50 pipe cutter

For cutting and simultaneously chamfering plastic wastewater pipes

90 23 01 BK

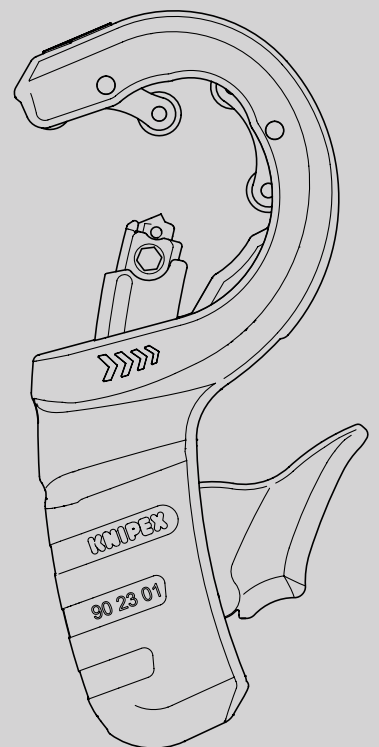

CONTENTS

1	General	3
1.1	Notes on operating instructions	3
1.2	Symbols used	3
1.3	Copyright	3
1.4	Guarantee and warranty	3
2	Safety	4
2.1	Intended use	4
3	Design and function	5
3.1	Design	5
3.2	Function	5
4	Operation	6
4.1	Adjusting the tool to the pipe diameter	6
4.2	Cutting plastic pipes	7
5	Maintenance	8
5.1	Replacing the blade	8
6	Accessories for retrofitting	9
6.1	Changing tools	9
6.2	Removing accessory blade 90 23 02 E01	9
7	Technical data	10
8	Disposal	10

1 General

1.1 Notes on operating instructions

These operating instructions are designed to enable you to use your tool safely and efficiently.

The tool may only be used if it is in technically perfect condition.

As a consequence of technical developments, the illustrations and descriptions contained in these operating instructions may differ slightly from the tool actually delivered.

We do not accept any liability for damage caused by failure to observe these operating instructions.

1.2 Symbols used

All safety instructions in these operating instructions are indicated by corresponding symbols. The signal words at the beginning of each safety instruction express the extent of the hazard.



Danger!

Danger of severe to fatal injury

This combination of symbol and signal word indicates an imminently hazardous situation that will result in death or serious injury if not avoided.



Warning!

Warning of potentially serious to fatal injury

This combination of symbol and signal word indicates a possibly hazardous situation that may result in death or serious injury if not avoided.



Caution!

Risk of minor injury

This combination of symbol and signal word indicates a dangerous situation that can lead to minor or moderate injury.



Please note!

Indicates possible damage to property or the environment

This combination of symbol and signal word stands for important information that helps to prevent damage to property or the environment.

1.3 Copyright

These operating instructions and all documentation supplied with this tool are protected by copyright and remain the property of KNIPEX.

The reprinting of these instructions, even in extract form, is only permitted with the written consent of KNIPEX Werk C. Gustav Putsch KG.

1.4 Guarantee and warranty

The manufacturer grants a statutory warranty in accordance with the current sales and delivery conditions. No further warranties or assurances are granted.

Within the warranty period, the warranty covers the rectification of all defects that can be traced back to material faults or manufacturing errors.

Wearing parts are excluded from the warranty.

The repair or replacement of a tool shall not result in an extension of the warranty period. Tools shall only be repaired or replaced with "as new" parts, whose function corresponds to that of the old parts. All defective and hence replaced parts are the property of the manufacturer.

Warranty claims shall expire in particular if:

- Damage is caused through improper operation, use for purposes other than those specified by the manufacturer, or poor maintenance.
- Repairs or conversions are carried out by unauthorized persons.
- Original accessories or spare parts from KNIPEX are not used.
- Defective components are not repaired immediately to minimise the extent of the damage and so as not to impair the safety of the tool (obligation to repair).

Furthermore, reference is made to the liability and warranty regulations of the current sales and delivery conditions.

2 Safety

2.1 Intended use

The tool is intended for the following uses:

- Cutting and simultaneous chamfering of plastic pipes made of PVC or PP with diameters of 32, 40 and 50 mm (up to 2.4 mm wall thickness); the piece to be cut off must be at least 10 mm long.

Any use beyond the intended purpose or any unauthorized modification shall be considered improper. The operator shall be liable for damages resulting from improper use.

Intended use also includes adhering to these operating instructions. They must be read in full before use.



Warning!

Warning: Sharp blades!

Handling sharp blades is dangerous. For this reason, make sure to handle your tools with care when working.



 
Warning!

Warning: Sharp blades!

Always transport the tool with the blade fully retracted (marking 32 mm). Never put your hand into the pipe holder.

3 Design and function

3.1 Design

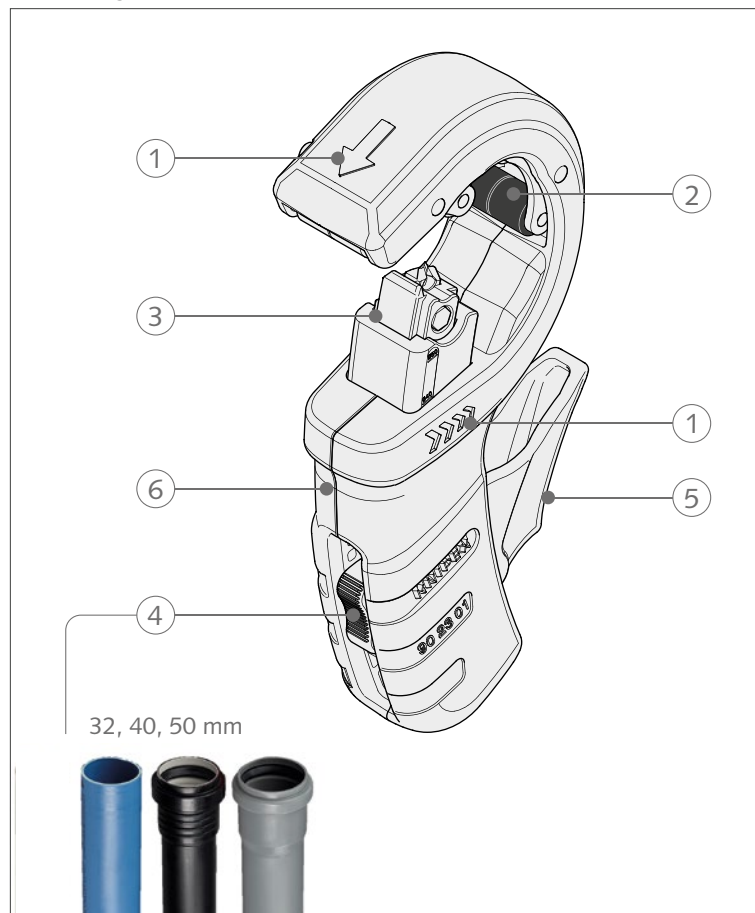

Setup of the DP50 pipe cutter

 
- 1 Arrows for direction of rotation
- 2 Pivoting guide rollers that secure the pipe for a right-angled cut
- 3 Adjustable cutting unit with replaceable blade and locking pin for the blade
- 4 Slider for setting the required pipe diameter (32, 40, 50 mm)
- 5 Lever for precise positioning of the pipe
- 6 Housing

3.2 Function

The DP50 pipe cutter is used to cut thin-walled plastic pipes and chamfer them at the same time.

4 Operation

4.1 Adjusting the tool to the pipe diameter

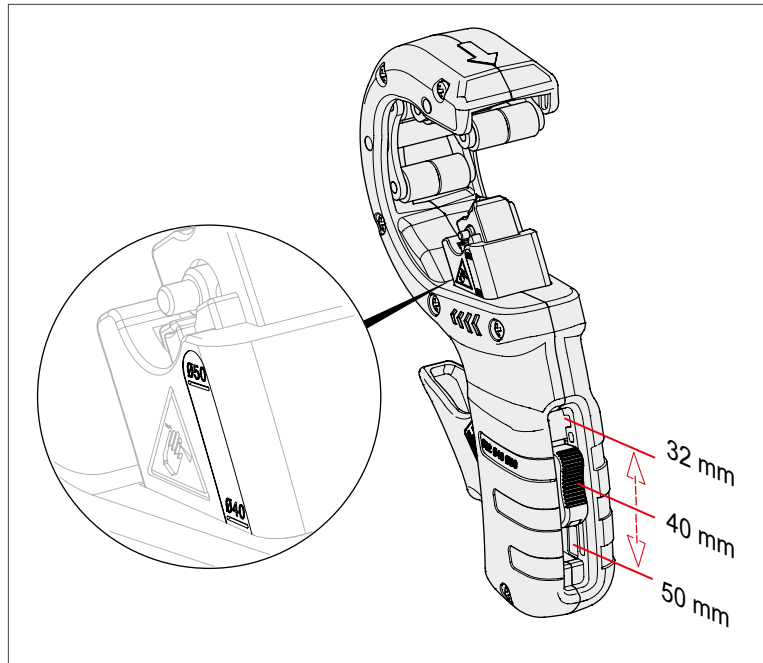


Setting the tool to the correct pipe diameter

1. Use the slider to set the desired pipe diameter (32, 40 or 50 mm). You can see the selected diameter on the blade block.


Tip:

 Press the slider slightly into the handle with your thumb and simultaneously guide the operating lever with two fingers.

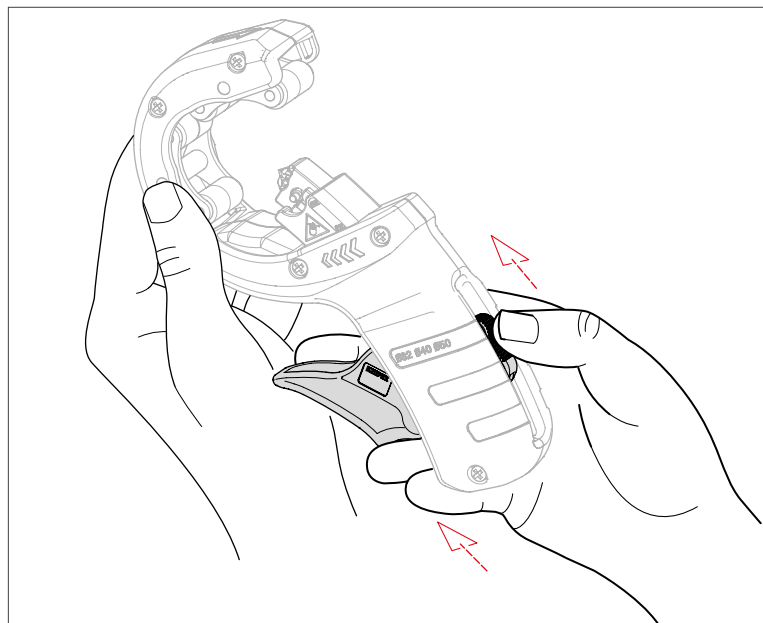

Tip: Guide the lever with two fingers during adjustment

 4.2 Cutting plastic pipes

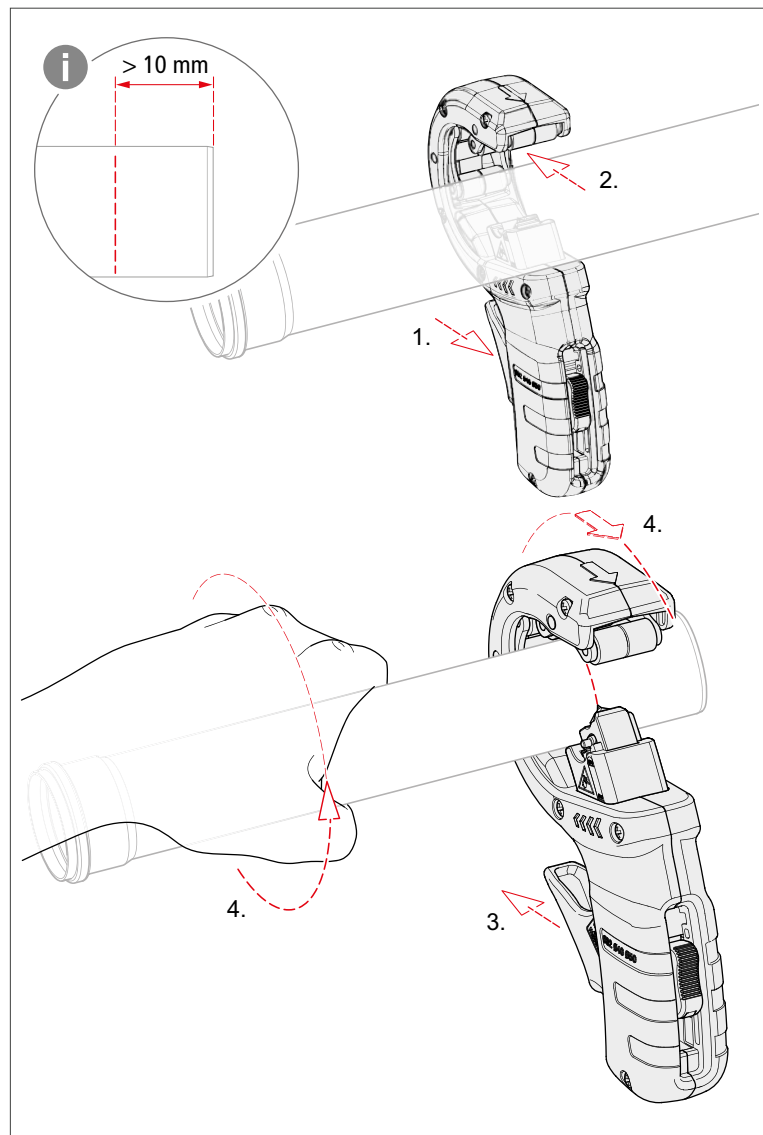

Cutting plastic pipes

1. Firmly press the lever against the handle to fully open the pipe holder.
2. Insert the pipe into the pipe cutter from the front.
Use the blade to position the pipe at the point to be cut. The piece to be cut must be **at least 10 mm** long!
3. Release the lever.
4. Now cut the pipe
by **turning the pipe cutter in the direction of the arrow** or
by **turning the pipe in the opposite direction to the arrow**.

Note

Never press the lever when cutting the pipe, otherwise the blade will no longer have the necessary cutting pressure!

 
A chamfer is applied to both cut edges when cutting.

5 Maintenance

5.1 Replacing the blade

The blade change is possible without tools.

5.1.1 Removing the blade

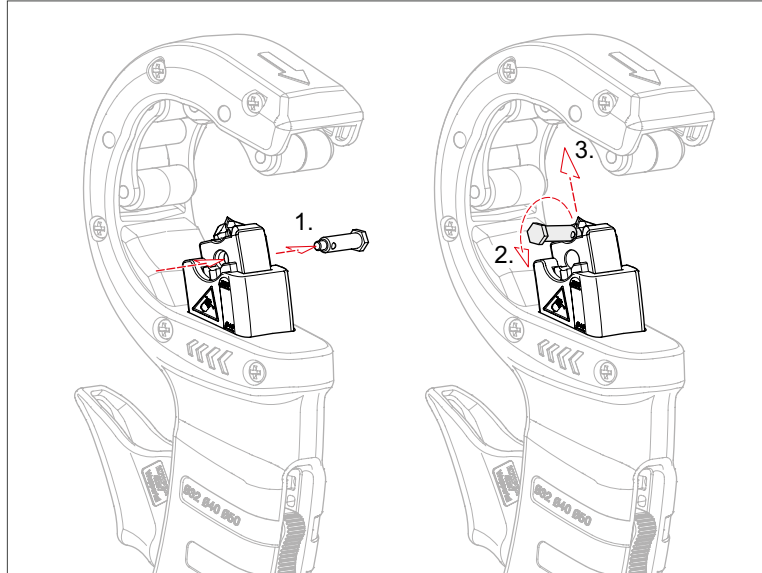


Taking out the blade

1. Slide the locking pin out of the cutting unit.
2. Use the thinner part of the pin to lever the blade out of the blade seat.
3. Then pull the loose blade out of the blade seat.

5.1.2 Installing a new blade

If the second side of the blade is still unused, you can turn the blade over and reinsert it.

 If both sides of the blade are worn out, insert a new blade (spare part).

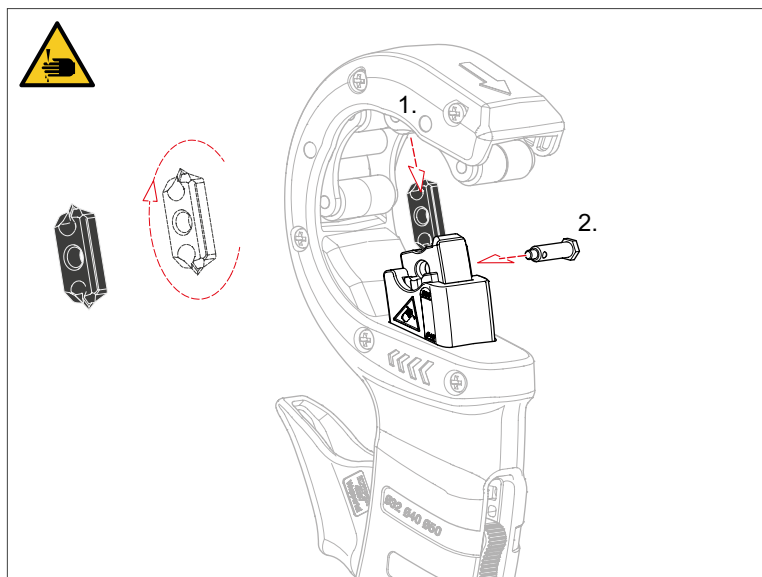


Inserting the blade

1. Insert the blade into the opening provided in the cutting unit. The blade can only be inserted in the correct position.
Caution: The blade is sharp!
2. Insert the locking pin from the correct side as far as it will go. If it is inserted incorrectly, the action of the tool will be blocked.

6 Accessories for retrofitting

 At market launch, the tool was delivered with a blue blade holder. In this tool variant, only the replacement blade 90 23 01 E01 can be used. Retrofitting is not possible.

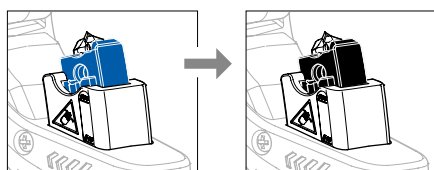


From approximately 06/2025, the tool will be delivered with a black blade holder. This tool variant can be retrofitted with the accessory blade 90 23 02 E01 for the following application:

- Cutting and simultaneous chamfering of plastic pipes made of PVC, PE or PP with diameters of 32, 40 and 50 mm (**2.5 – 3.5 mm wall thickness**); the piece to be cut off must be at least 10 mm long.

6.1 Changing tools

- » Remove the blade from the tool (see „5.1.1 Removing the blade” on page 8).
- » Install the accessory blade 90 23 02 E01 (see „5.1.2 Installing a new blade” on page 8).

 6.2 Removing accessory blade 90 23 02 E01

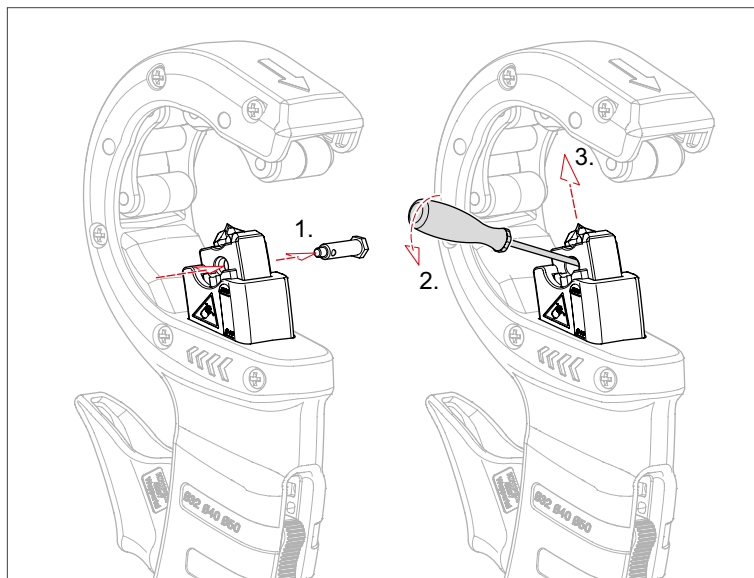

Removing the blade

1. Slide the locking pin out of the cutting unit.
2. Lever the blade out of the blade seat using a flat-blade screwdriver, for example
3. Then pull the loose blade out of the blade seat.

7 Technical data

Technical data	Unit	
Item number of DP50 pipe cutter	–	90 23 01 BK
Item number of replacement blade for 90 23 01 BK (wall thickness < 2,4 mm)	–	90 23 01 E01
Item number of accessory blade for 90 23 01 BK (for conversion to wall thickness 2.5–3.5 mm)	–	90 23 02 E01
Item number of spare quick-change axle	–	90 23 01 E02
Length	mm	202
Width	mm	91
Depth	mm	40
Weight approx.	g	294

8 Disposal

Ensure that the dismantled parts of the tool are properly recycled.



KNIPEX-Werk
C. Gustav Putsch KG

42337 Wuppertal

Tel.: +49 202 – 47 94-0
Fax: +49 202 – 47 74 94

info@knipex.com
www.knipex.com