

Einstellwerte für gedrehte Kontakte Settings for closed turned contacts



Werkzeuge / Tools 97 52 63 A / 97 52 63 DG A

Hinweis: Das Einstellmaß und die Locator-Position der Crimpzange sind entsprechend dem Leiterquerschnitt anzupassen. Zur Ermittlung der hier aufgeführten Crimpeinstellungen wurde ein handelsübliches, feindrähtiges Litzenkabel verwendet. Die ermittelten Werte sind lediglich Richtgrößen und ohne Gewähr. Die Crimpeinstellungen sind vom Anwender mit der jeweils eingesetzten Litze konkret zu prüfen.

Note: The crimping depth and the locator position on the crimping tool must be adjusted to match the conductor cross-section. A standard, fine-stranded cable was used to determine the crimping settings listed here. The values given are for guidance only and are provided without warranty. The user must verify the crimping settings specifically for the stranded cable being used.

Hersteller Manufacturer	Locator Knipex	Nummer 1 Contact No. 1	Nummer 2 Contact No. 2	Steckerserie (Gehäuse) Connector series (housing)	Crimpkontaktserie Crimp contact series	Einstellmaß Setting dim. [mm]	Querschnitt Cross-section [mm ²]	Locator- position
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	0,56	0,08	Stift 01
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	0,65	0,14	Stift 01
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	0,74	0,25	Stift 01
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	0,84	0,35	Stift 01
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	0,84	0,50	Stift 01
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	0,94	0,75	Stift 01
Intercontec	97 59 63 TE1	60.001.XX	60-0001-011	M17 / M23	617 / 917 / 932 / 623	1,04	1,00	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	0,56	0,08	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	0,65	0,14	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	0,74	0,25	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	0,84	0,35	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	0,84	0,50	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	0,94	0,75	Stift 01
Intercontec	97 59 63 TE1	60.011.XX	60-0011-011	M17 / M23	617 / 917 / 932 / 623	1,04	1,00	Stift 01
Intercontec	97 59 63 TE1	60.070.XX	60-0070-011	M17	932	0,56	0,08	Stift 02
Intercontec	97 59 63 TE1	60.070.XX	60-0070-011	M17	932	0,65	0,14	Stift 02
Intercontec	97 59 63 TE1	60.070.XX	60-0070-011	M17	932	0,74	0,25	Stift 02
Intercontec	97 59 63 TE1	60.070.XX	60-0070-011	M17	932	0,84	0,35	Stift 02
Intercontec	97 59 63 TE1	60.070.XX	60-0070-011	M17	932	0,84	0,50	Stift 02
Intercontec	97 59 63 TE1	60.070.XX	60-0070-011	M17	932	1,04	1,00	Stift 02
Intercontec	97 59 63 TE1	60.159.XX	60-0159-011	M17	917 / 923 / P520	0,65	0,50	Stift 04
Intercontec	97 59 63 TE1	60.159.XX	60-0159-011	M17	917 / 923 / P520	0,74	0,75	Stift 04
Intercontec	97 59 63 TE1	60.159.XX	60-0159-011	M17	917 / 923 / P520	0,84	1,00	Stift 04
Intercontec	97 59 63 TE1	60.159.XX	60-0159-011	M17	917 / 923 / P520	0,94	1,50	Stift 04
Intercontec	97 59 63 TE1	60.172.XX	60-0172-011	M27 / M23	627 / 932 / 623	0,56	0,03	Stift 01
Intercontec	97 59 63 TE1	60.172.XX	60-0172-011	M27 / M23	627 / 932 / 623	0,65	0,08	Stift 01
Intercontec	97 59 63 TE1	60.172.XX	60-0172-011	M27 / M23	627 / 932 / 623	0,74	0,14	Stift 01
Intercontec	97 59 63 TE1	60.172.XX	60-0172-011	M27 / M23	627 / 932 / 623	0,84	0,25	Stift 01
Intercontec	97 59 63 TE1	60.172.XX	60-0172-011	M27 / M23	627 / 932 / 623	0,94	0,35	Stift 01
Intercontec	97 59 63 TE1	60.205.XX	60-0205-011	M17	617 / 917	0,65	0,14	Stift 03
Intercontec	97 59 63 TE1	60.205.XX	60-0205-011	M17	617 / 917	0,74	0,25	Stift 03
Intercontec	97 59 63 TE1	60.205.XX	60-0205-011	M17	617 / 917	0,84	0,34	Stift 03
Intercontec	97 59 63 TE1	60.205.XX	60-0205-011	M17	617 / 917	0,84	0,50	Stift 03
Intercontec	97 59 63 TE1	60.279.XX	60-0279-011	M23	723	0,65	0,14	Stift 01
Intercontec	97 59 63 TE1	60.279.XX	60-0279-011	M23	723	0,74	0,25	Stift 01
Intercontec	97 59 63 TE1	60.279.XX	60-0279-011	M23	723	0,84	0,34	Stift 01
Intercontec	97 59 63 TE1	60.279.XX	60-0279-011	M23	723	0,84	0,50	Stift 01
Intercontec	97 59 63 TE1	60.279.XX	60-0279-011	M23	723	0,94	0,75	Stift 01
Intercontec	97 59 63 TE1	60.279.XX	60-0279-011	M23	723	1,04	1,00	Stift 01
Intercontec	97 59 63 TE1	60.486.XX	60-0486-011	M17	617 / 917	0,65	0,14	Stift 03
Intercontec	97 59 63 TE1	60.486.XX	60-0486-011	M17	617 / 917	0,74	0,25	Stift 03
Intercontec	97 59 63 TE1	60.486.XX	60-0486-011	M17	617 / 917	0,84	0,34	Stift 03
Intercontec	97 59 63 TE1	60.486.XX	60-0486-011	M17	617 / 917	0,84	0,50	Stift 03
Intercontec	97 59 63 TE1	61.004.XX	61-0004-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,56	0,08	Stift 01
Intercontec	97 59 63 TE1	61.004.XX	61-0004-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,65	0,14	Stift 01
Intercontec	97 59 63 TE1	61.004.XX	61-0004-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,74	0,25	Stift 01
Intercontec	97 59 63 TE1	61.004.XX	61-0004-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,84	0,35	Stift 01
Intercontec	97 59 63 TE1	61.004.XX	61-0004-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,94	0,50	Stift 01
Intercontec	97 59 63 TE1	61.004.XX	61-0004-011	M17 / M27 / M23	617 / 627 / 932 / 623	1,04	0,75	Stift 01
Intercontec	97 59 63 TE1	61.072.XX	61-0072-011	M23	623	0,65	0,14	Stift 02
Intercontec	97 59 63 TE1	61.072.XX	61-0072-011	M23	623	0,74	0,25	Stift 02
Intercontec	97 59 63 TE1	61.072.XX	61-0072-011	M23	623	0,84	0,34	Stift 02
Intercontec	97 59 63 TE1	61.072.XX	61-0072-011	M23	623	0,84	0,50	Stift 02
Intercontec	97 59 63 TE1	61.072.XX	61-0072-011	M23	623	0,94	0,75	Stift 02
Intercontec	97 59 63 TE1	61.072.XX	61-0072-011	M23	623	1,04	1,00	Stift 02

Hersteller Manufacturer	Locator Knipex	Nummer 1 Contact No. 1	Nummer 2 Contact No. 2	Steckerserie (Gehäuse) Connector series (housing)	Crimpkontaktserie Crimp contact series	Einstellmaß Setting dim. [mm]	Querschnitt Cross-section [mm ²]	Locator- position
Intercontec	97 59 63 TE1	61.083.XX	61-0083-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,65	0,08	Stift 01
Intercontec	97 59 63 TE1	61.083.XX	61-0083-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,74	0,14	Stift 01
Intercontec	97 59 63 TE1	61.083.XX	61-0083-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,84	0,25	Stift 01
Intercontec	97 59 63 TE1	61.083.XX	61-0083-011	M17 / M27 / M23	617 / 627 / 932 / 623	0,94	0,34	Stift 01
Intercontec	97 59 63 TE1	61.141.XX	61-0141-011	M17	617 / 917	0,65	0,50	Stift 04
Intercontec	97 59 63 TE1	61.141.XX	61-0141-011	M17	617 / 917	0,74	0,75	Stift 04
Intercontec	97 59 63 TE1	61.141.XX	61-0141-011	M17	617 / 917	0,84	1,00	Stift 04
Intercontec	97 59 63 TE1	61.141.XX	61-0141-011	M17	617 / 917	0,94	1,50	Stift 04
Intercontec	97 59 63 TE1	61.151.XX	61-0151-011	M17	617 / 917	0,65	0,08	Stift 03
Intercontec	97 59 63 TE1	61.151.XX	61-0151-011	M17	617 / 917	0,74	0,14	Stift 03
Intercontec	97 59 63 TE1	61.151.XX	61-0151-011	M17	617 / 917	0,84	0,25	Stift 03
Intercontec	97 59 63 TE1	61.151.XX	61-0151-011	M17	617 / 917	0,94	0,34	Stift 03
Intercontec	97 59 63 TE1	61.178.XX	61-0178-011	M17	617 / 917	0,56	0,08	Stift 03
Intercontec	97 59 63 TE1	61.178.XX	61-0178-011	M17	617 / 917	0,65	0,14	Stift 03
Intercontec	97 59 63 TE1	61.178.XX	61-0178-011	M17	617 / 917	0,74	0,25	Stift 03
Intercontec	97 59 63 TE1	61.178.XX	61-0178-011	M17	617 / 917	0,84	0,34	Stift 03
Intercontec	97 59 63 TE1	61.178.XX	61-0178-011	M17	617 / 917	0,84	0,50	Stift 03
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	0,56	0,08	Stift 01
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	0,65	0,14	Stift 01
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	0,74	0,25	Stift 01
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	0,84	0,34	Stift 01
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	0,84	0,50	Stift 01
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	0,94	0,75	Stift 01
Intercontec	97 59 63 TE1	61.253.XX	61-0253-011	M23	723	1,04	1,00	Stift 01